

Model 9110

100W Multi Range 60V/5A DC Power Supply


Data Sheet

100W Multi Range 60V/5A DC Power Supply

A TYPE CONTRACT OF THE CONTRAC

Model 9110

The 9110 is a new type of power supply. Unlike conventional power supplies with fixed output ratings, the 9110 automatically recalculates voltage/current limits for each setting, forming a constant power hyperbolic shaped boundary as illustrated in the diagram below. The 9110 provides 100W output power in any Volt/Amp combination within the rated voltage (60V) and current (5A) limits. By providing greatly expanded choices of Volt/Amp combinations, users can cut down on the number of power supplies required and free up valuable bench space.

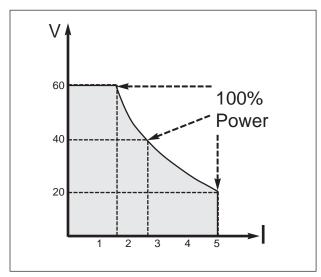

Example:

When setting the voltage to the maximum of 60V, the maximum current value is 100W/60V = 1.66A. For a 20V setting, the maximum current is 5A. Maximum output power of 100W is possible for all Volt/Amp combinations that lie on the hyperbolic curve.



Key Features:

- Digitally controlled, mixed mode linear/switching DC power supply
- I0mV/ImA resolution over the full range
- Bright, easy to read display
- Very compact size and light weight
- Low ripple and noise
- High reliability due to OCP, OVP and OTP (Over current/voltage/temperature protection)
- Output On/Off control
- Store and recall 4 x 100 groups of preset Volt/Amp values
- Temperature controlled, variable speed fan cooling

| Specifications model | | |
|----------------------|------------------|---------------|
| | 9110 | |
| | Voltage | Current |
| Output Ratings | 0 ~ 60V | 0 ~ 5A |
| | Max. Power: 100W | |
| Load Regulation | ≤ 0.01% + 3mV | ≤ 0.01% + 3mA |
| Line Regulation | ≤ 0.01% + 3mV | ≤ 0.1% + 2mA |
| Setting Accuracy | ≤ 0.05% + 10mV | ≤ 0.2% + 2mA |
| Display Accuracy | ≤ 0.05% + 10mV | ≤ 0.1% + 2mA |
| Ripple | ≤ 2.0 mVrms | ≤ 5 mArms |

| General | | |
|------------------------|--|--|
| State Storage Memory | 100 groups with 4 sets of Volt/Amp memories each | |
| Weight | 5.9lbs (2.65kg) | |
| Dimensions (W x H x D) | 3.47" x 6.9" x 11.11" | |
| | (88mm x 175mm x 282mm) | |

Accessories One Year Warranty

SUPPLIED: Line Cord, Manual

OPTIONAL: TL 5A (5A test leads), TL 30 (30A test leads), TLPS (Power supply test lead kit)

Specifications subject to change without notice